



APPLICATION INSTRUCTIONS

For Apple iPhone 4 & 4S




www.bufflabs.com

© 2012 BUFF Labs All rights reserved.
Designed by BUFF Labs in Washington, USA.
Patent pending.

BUFF LABS LIMITED WARRANTY

This screen protection film is intended to provide enhanced impact protection versus regular scratch-proof screen protection film. User agrees that Buff Labs' liability is limited to repair or replacement of the screen protection film exclusively. In no circumstances shall Buff Labs be liable for any items (including electronics) used in conjunction with Buff Labs' products. Buff Labs cannot ensure proper application of the film, nor post-production damage to the film and therefore is not responsible for any damages to contents protected by the film. It is user's responsibility to ensure the film will protect the contents to user's satisfaction. User uses this film at his/her own discretion and takes responsibility for any damages to any items used with the film.

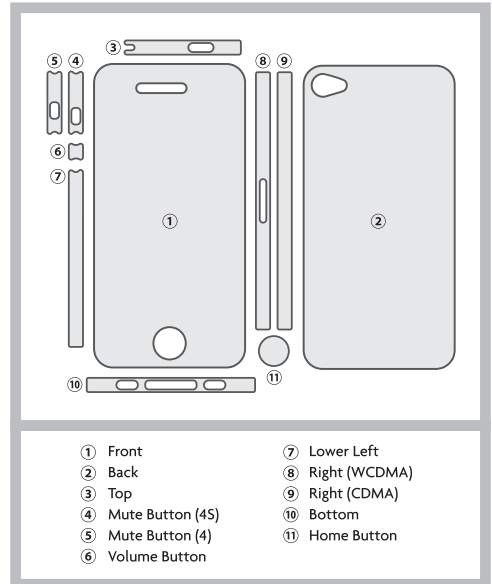


Directions to apply the BUFF Shock Absorption Film


* Keep the adhesive side clean for better adhesion.



Peel off the adhesive side of the film.

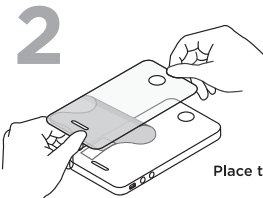


Place the film directly over the phone.

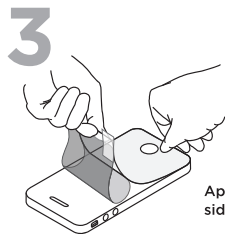

Apply from the bottom (Home button side) to the top.



Scan to watch
the installation video.

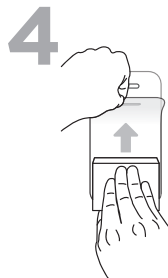

As you peel off the adhesive side, start applying the film from the bottom to the top using the squeegee.



If application is unsatisfactory or there are large air bubbles, you may use a piece of tape to remove the film and repeat the application process.



BUFF's proprietary air bubble releasing adhesive should take about 24 hours to get rid of air bubbles. Time varies depending on the weather condition.